




KITS DE ÁRBOLES DE LEVAS DISPONIBLES PARA VW 1.6 / 2.0 TDI

TUBO DE ACERO


647290K = 647290 + 647291 + 16 x 670371 + 16 x 670372

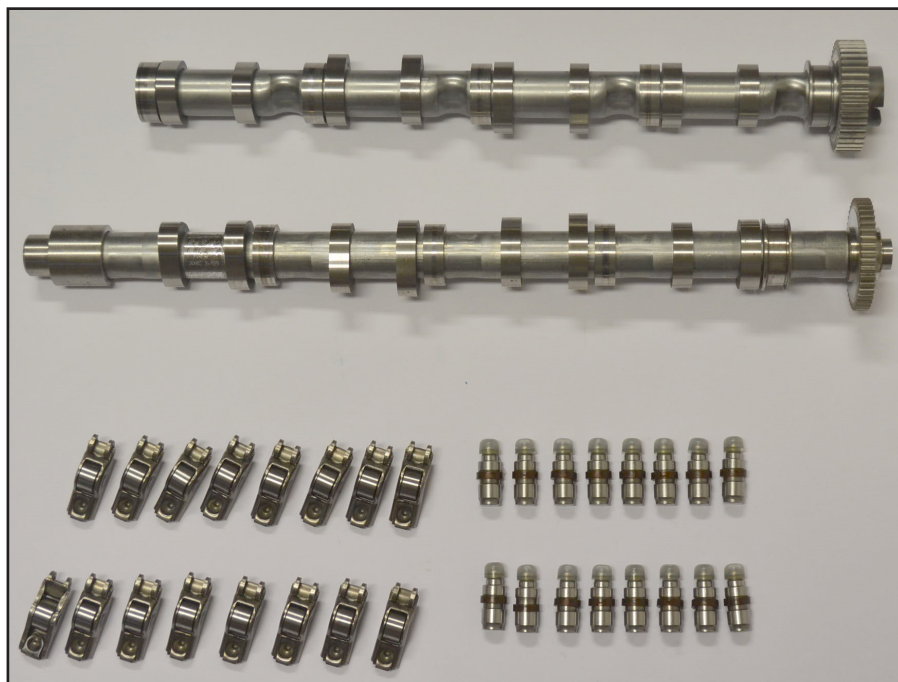

AMC REF.		O.E. REF.
647290	ÁRBOL ADMISIÓN	03L109021 03L109021E
647291	ÁRBOL ESCAPE	03L109022 03L109022D
670371	BALANCINES	059109417J
670372	EMPUJADORES	059109521A 059109521G

HIERRO

647390K = 647390 + 647391 + 16 x 670371 + 16 x 670372

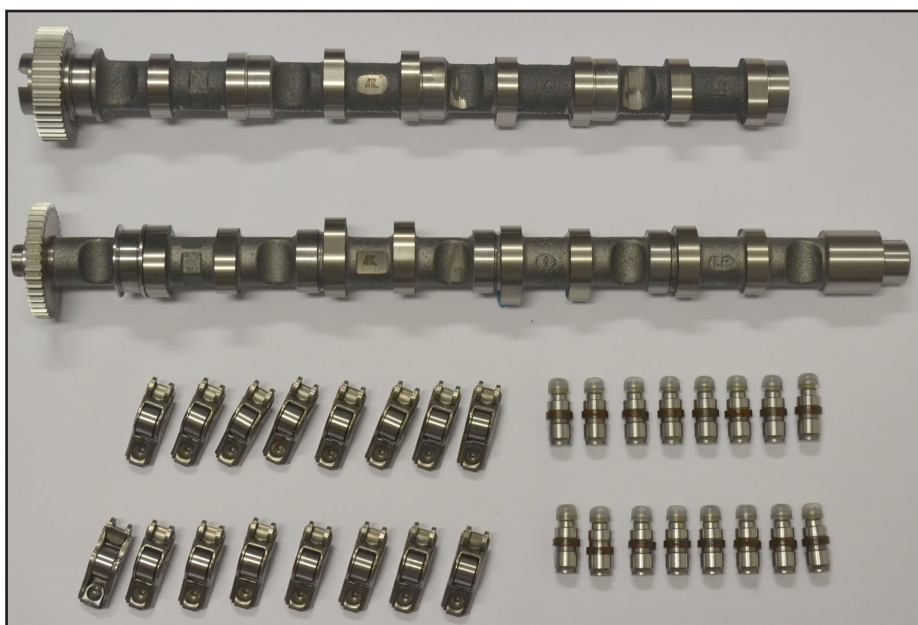

AMC REF.		O.E. REF.
647390	ÁRBOL ADMISIÓN	03L109021 03L109021E
647391	ÁRBOL ESCAPE	03L109022 03L109022D
670371	BALANCINES	059109417J
670372	EMPUJADORES	059109521A 059109521G

